

Assembly Instructions for Z-Matter

Installing [ZMatter](#) into your Polisy is pretty straight forward.

Preparations:


1. If your Polisy has been collecting dust for more than a year, the first thing you need to do is to freshen it up. Here's [how you do it](#). Once done, you can access your Polisy just like you did your ISY994. Here's [how to do so](#).
2. If you have not already migrated your ISY994 to Polisy, that's the first thing you need to do. Migration is easy and you can even use your existing PLM for INSTEON/X10 communications. Here are [the instructions](#).
3. You will be sent **further instructions** for the required loX version and how-tos for untapping our additional features and enhancements by 12/01/2022.

Installation Instructions:

1. Unplug Polisy from power
2. Take off the top panel by unscrewing the 4 screws on the sides (2 on each side)
3. Connect the SMA side of the antenna wires into the two holes on each side of the top panel



4. Plugin the ZMatter board into the first mPCIe slot from the left. Ensure that it latches in just like the SSD. Please note, you may not have a WiFi card.

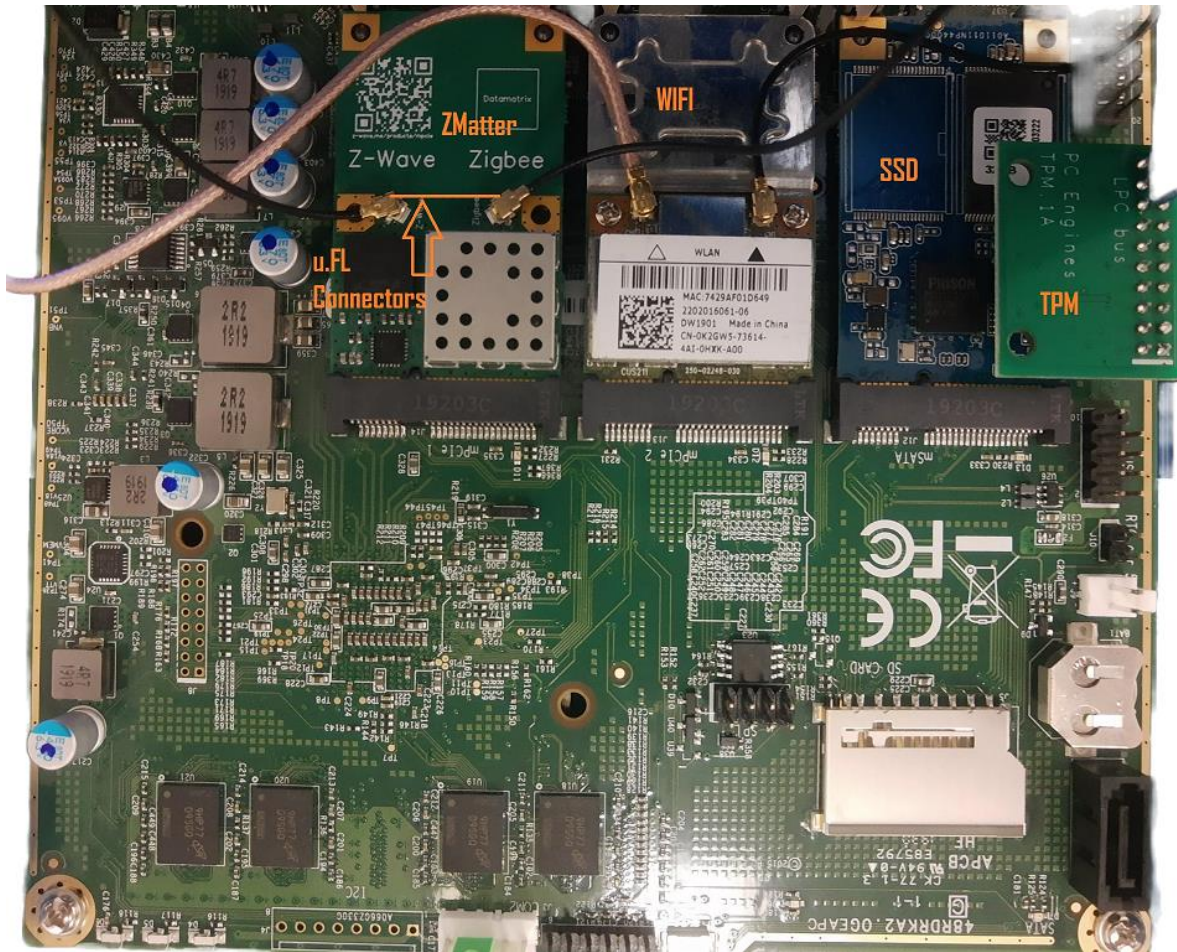

5. Align the top panel on top of Polisy and move it backward so that you can see the u.FL connectors on the board.
6. Gently push in the u.FL side of the antenna wires into the u.FL connectors. Ensure that they click in.
7. Gently push the top panel back so that it's flush with the bottom and screw back the 4 screws on the sides.
8. Attach the antennas one on each side.

NOTE: facing the front of the unit

- Z-Wave antenna has a **Yellow** band on top and goes to the **left**
- Zigbee antenna has a **Red** band on top and goes to the **right**



Enjoy the beauty!

